

Caster and Camber Chart

Caster	Camber	Upper	Lower	Remarks
Maximum	Central (mid track)	III	III	Maximum Caster
more	more positive	II	III	
more	more negative	III	II	
central (mid wb)	Max Negative	0	II	Maximum Negative Camber
central (mid wb)	Central (wide track)		II	Factory Neutral Setting
central (mid wb)	Maximum Positive		0	Maximum Positive Camber
less	more positive			
less	more negative		II	
minimum	cental (mid track)			Minimum Caster

Fixed Bottom Center

Position 1 on top carrier will give more negative camber and caster

Position II gives less negative camber than adjustable carrier and no effect on caster

Position III will give more negative camber and more caster

Note: Adjusters must be installed in the following manner. First, left side adjusters will be identical and numbered in a cloockwise manner. Right side adjusters will be numbered in a counter clockwise manner. With tops and bottoms set (to inside) at "II", top fronts on both sides will be "I" and bottom will be "III".



